

Aseptic Filling & Closing



When shelf life is your priority

There is a growing demand for aseptic filling of liquid products into packaging without making use of hot fill or using preservatives and still maintaining an extended shelf life. A frequent problem, especially on small scale, is the sampling, packaging and storage of products without introducing risk of contamination. The OMVE Aseptic Bag in Box Filler gives you the highest assurance of Aseptic Filling on small scale.


Unique features

- Compact design
- Controlled by Touch screen
- Suitable for a broad range of products
- No chemical sterilization of packaging with risk of contamination
- Seamless Integration with OMVE HT220 or HT320 HTST/UHT systems

Standard accessories

- Electric – Magnetic Flow meter
- 16mm filling gland (32mm optional)
- 15 liter buffer tank
- Brix meter
- Divert valve
- Condensate flush
- Data logging


Applications

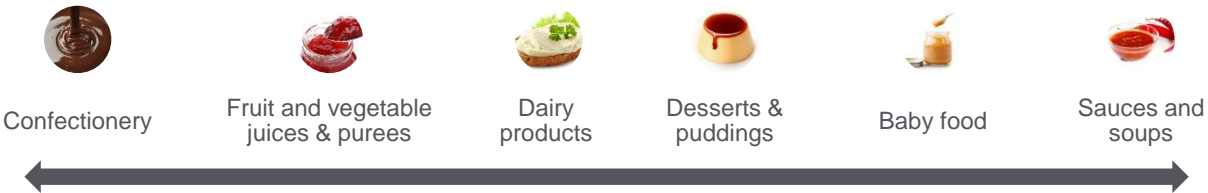

Working Principle



The pre-sterilized bag (sizes from 2-10 liters) is connected into the filling chamber. The small chamber separating the gland membrane to the product is steam flushed to get rid of the air and then sterilized by steam. Remember that the membrane has very little bioburden. The top membrane of the gland is pierced to fill the bag. After filling, the bag is heat sealed. In this way no chance of contamination during filling can occur.

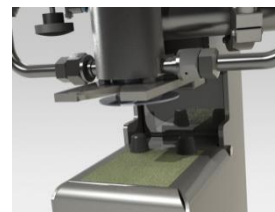

Specifications

Bag sizes	From 2liter up to 10liter
Filling cycle	
With 16mm filling gland*	2x 10 liter bags / min
	3x 5 liter bags / min
	4x 2 liter bags / min
Sterilization time	10-12sec
Accuracy	+/-1%
Filling temperature	Up to 80°C
Particles (soft)	<7mm
Filling controlled by	two hand control
Cleaning / Sterilization suitable	CIP / SIP
Materials	
Product line	SS AISI 316
Frame	SS AISI 304
Dimensions	
LxWxH	950 x 850 x 2060 mm
Weight	210kg
Utilities	
Steam	3-5 bar(g)
Electrical	220V/1ph/50Hz/16A or 220V 3ph/60Hz/16A
Compressed Air Supply	6-7 bar(g) [87-100psi]
Water supply	Max 3.5 bar(g) [51psi]
Condensate	Drain

* optional 32mm gland

Pack your product in



Aseptic Bags
From 5L to 200L

Higher capacities on request

Complete HTST/UHT process with products packed in Aseptic Filler



Why OMVE

- ✓ OMVE is fully **specialized** in manufacturing R&D and Pilot plant equipment since 1993
- ✓ OMVE is the **preferred supplier** for the leading multinationals worldwide.
- ✓ OMVE Systems are designed and manufactures according to the **highest industrial standards**
- ✓ OMVE Systems have **2 years'** warrantee
- ✓ OMVE Systems are supplied with **CE certification**
- ✓ OMVE offers the **most comprehensive service** in the market